





Parts List

Roller
 Bearing
 Bearing cover
 Rotor
 Screw M8 x 20
 Washer
 Handle
 Bearing cover
 Bearing 6201
 Gear box

Gear box
 Screw ST4. 8x35
 Stop cover
 Spring
 Screw M5x16
 Screw M5x12
 Stop pin
 Bearing 0810
 Axle Check Ring
 Gear

21. Packing gland22. Screw M4x1623. Dust cover

20. Axle Check Ring

24. Spindle

25. Wool wheel

26. Key 4x12

27. Brush cap

28. Carbon brush

29. Brush holder

3.

30. Name plate

31. Stator

32. Screw ST4.8x70

33. Housing Ass'y

34. Label

35. Handle(L)

36. Cord cover

37. Cord

38. Cord flange

39. Screw ST4.2x18

40. handle(R)

41. Switch

42. Rivet 2x10

43. Spring

44. Switch

45. Name plate

1.Structure and use

This tool belongs to H type of electric - driving tools, safe and reliable, advanced technological level, high efficiency, convenient repair it is the ideal tool for working on automobiles, fumiture decorating and etc.

2. Safety instruction

Before using this tool, please carefully read following safety instruction so as to avoid any unexpected accidents such as fire, electric shock or injunies.

- ① Clean the surround space of the tool. Disordered working surrounding or working table can cause accidents.
- ② The safe working environment. Do not use the tool in the dark and wet areas, do not put the inflammable liquids or gas nearby the working tool. Please do not put the tool under the rain.
- 3 Avoid electric shock! To avoid danger, don't touch any metal materials and electric appliances connected to the ground, such as: water tube, hear radiator, refrigerator during working period.
- (4) Keep all visitors(especially children) away from working area. Don't let the visitors touch the tool and wire.
- (3) Wear proper working uniform. No loose cloth during work, it is very easy to get caught into the moving tool in such a high speed. Please wear rubber glove and good shoes, ware protective hat if you have long hair.
- 6 Please wear masker and safety glasses during working.
- ? Prevention of accidental starting. Make sure the power switch is OFF before plugging in.

Disconnect the tool from power supply when change the polishing wheel.

- Operate carefully. Do not operate the machine when feeling tired or not feeling
 wee. Keep proper position and posture. stand firmly all the time.
- When used in outdoor to use the specific extension cord.
- (11) Check working parts carefully to make sure that there is no hidden nail left behind before start working.

3.Operating instruction

1 Illustrations for Operating parts

auxiliary ring - looking handle, switch adjust wheel, switch self - locking button, switch button, brush cover

② For your safety. please use auxiliary handle(see Figure 1)

The collar flange of the auxiliary ring-looking handle should properly fit into the groove of the head cover.

- 3 Auxiliary ring looking handle can be installed in both directions screw, lever for hexagon screw.
- (4) When mounting or remove the polish wheel, press self-locking button, return to the original position after mounting the polishing wheel. (see Figure 2)
- (3) When the woolen wheel worn out, change the wheel and the woolen wheel must be concentric alignment with the polishing wheel.
- (6) Adjust stepless speed regulator from 600rpm to 3000rpm according to requirement, it is the highest speed in the "6" position gradually slow down, lowest in the "1" position. (see the figure 4)

 Speed regulating wheel speed regulating position.
- ① The perfect working angle for the machine (see figure 5). It is the best working angle when the woolen wheel is 15° to the working part.
- 4. Auxiliary parts

Carbon brush 1 pc hexagon spanner 1 pc woollen wheel 1 pc



Fig 1



Fig 2

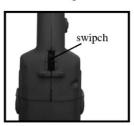


Fig 4



Fig 5

